



After placing an underlay sheet, its closing edge should be aligned with the starting edge of the following sheet, and adjoining pairs of binding plywood planks should be stapled in at least two

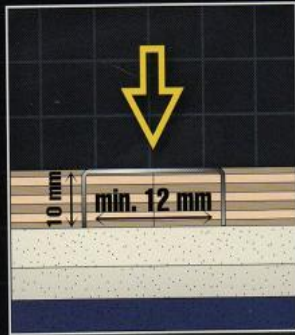

places with the help of a stapler gun. It is recommended to use 10 mm long and at least 12 mm wide staples. After you have reached the opposite wall, trim the end sheets to their final size taking into

account the expansion clearance. The cut-off piece can be used to start a new row. Make sure the joints between the rows do not fall in one line (they should make a bond). The proper spacing between the rows is insured by the plywood binding planks extending from the sheets in the direction of advance. Folding clamps placed on the sheet edges prevent the rows from coming apart. Use a plunge saw to trim the underlay sheets of the closing row in the lengthwise direction when required.

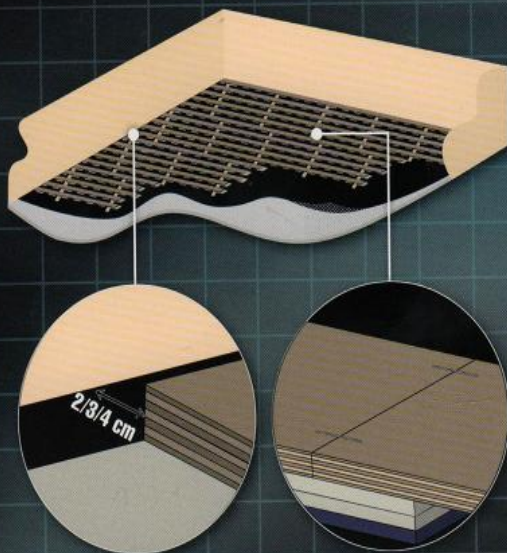

## INSTALLATION OF THE GRABO SPRINGAIR PARQUET FLOORING

The parquet boards should be installed down the longer axis of the gym hall (in the direction of the game), perpendicular to the installation direction of the underlay.

Lay the first board with the tongue towards the wall and the groove outwards in the direction of advance.

**ADJUST THE LENGTH OF THE FIRST BOARD IN SUCH A WAY THAT THE OUTER EDGE OF THE BOARD SHOULD EXACTLY MATCH THE CENTERLINE OF THE BINDING PLANK.**

If you do so with the first board, the subsequent boards will have their edges aligned automatically to the centerline of the binding planks as you proceed. It is critical for the proper performance and durability of the parquet system that each board edge should rest on the plywood plank.

The parquet boards should only be glued to the base, and not to each other. For better moisture control, however, the parquet boards can be interlocked by applying some PVA adhesive to the grooves of the adjoining parquet boards before attaching the boards to the underlay.

While gluing the parquet to the underlay, the adhesive should be applied to each plank in two parallel strips, each strip 10 mm wide and 10 mm high, distanced 50 mm from each other.

- 🔧 Adhesive: SikaBond – T52FC or flexible adhesive Bona R850, or similar quality products by other manufacturers.
- 🔧 Applying the adhesive: manually or using applicator gun with a 10 mm beak.

Whatever adhesive is used, the manufacturer's instructions should always be observed during application.